


Plumbase P007147
Polypipe Black 1½" Access Plug




PARTS ×1
 19005783

Side


Cap
 drill 8mm hole in centre

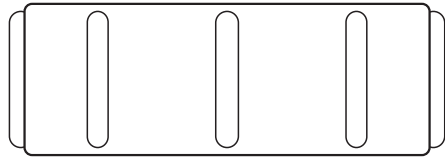



Body
 remove lower portion

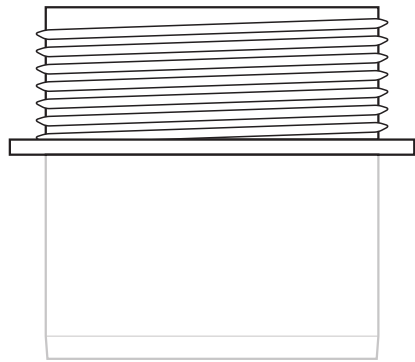

Body
 Cut 4mm notch
 incl part of 2 rows of thread

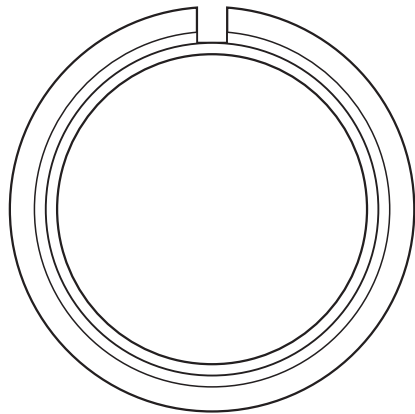

Rubber Seal Disc
 cut 12mm slit in centre

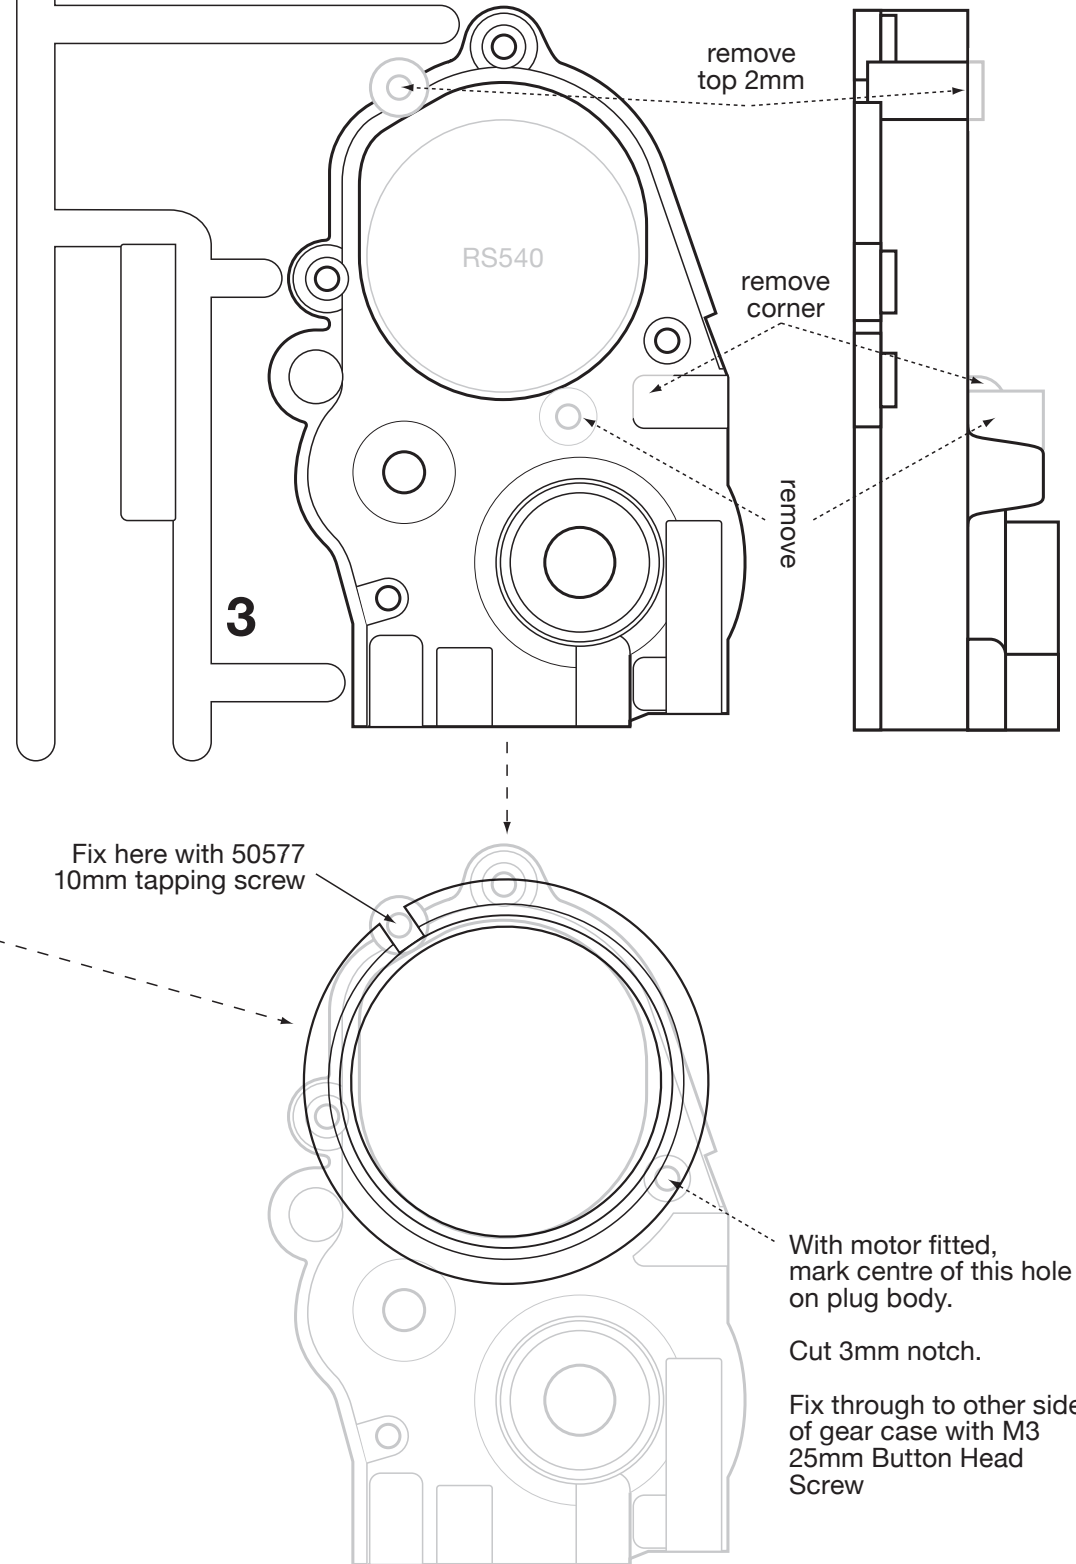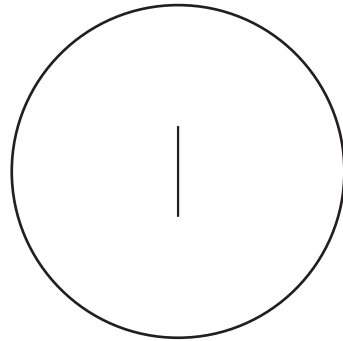

3

RS540

remove
 top 2mm

remove
 corner

remove

Fix here with 50577
 10mm tapping screw

With motor fitted,
 mark centre of this hole
 on plug body.

Cut 3mm notch.

Fix through to other side
 of gear case with M3
 25mm Button Head
 Screw