


FRONT SHOCK MOUNT

Cut 5mm HDPE to size (hacksaw is quicker, Stanley is neater) and mark with a bradawl the holes as shown in the diagram. (It may help to download and print this template **AT 100%**, stick it to the HDPE and cut/mark through.)

© airlombe.co.uk

You may not reproduce, duplicate, copy, sell, trade or otherwise exploit this design for any commercial purpose.

This may be reproduced for personal use or non-commercial purposes - please help yourself; if you do, just eMail Airlombe.co.uk to let us know about such usage.

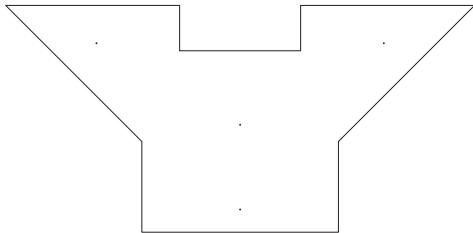

62x30mm overall



10cm for reference

In situ:

